


2393 - Jeep Trackhawk Downsize (350)

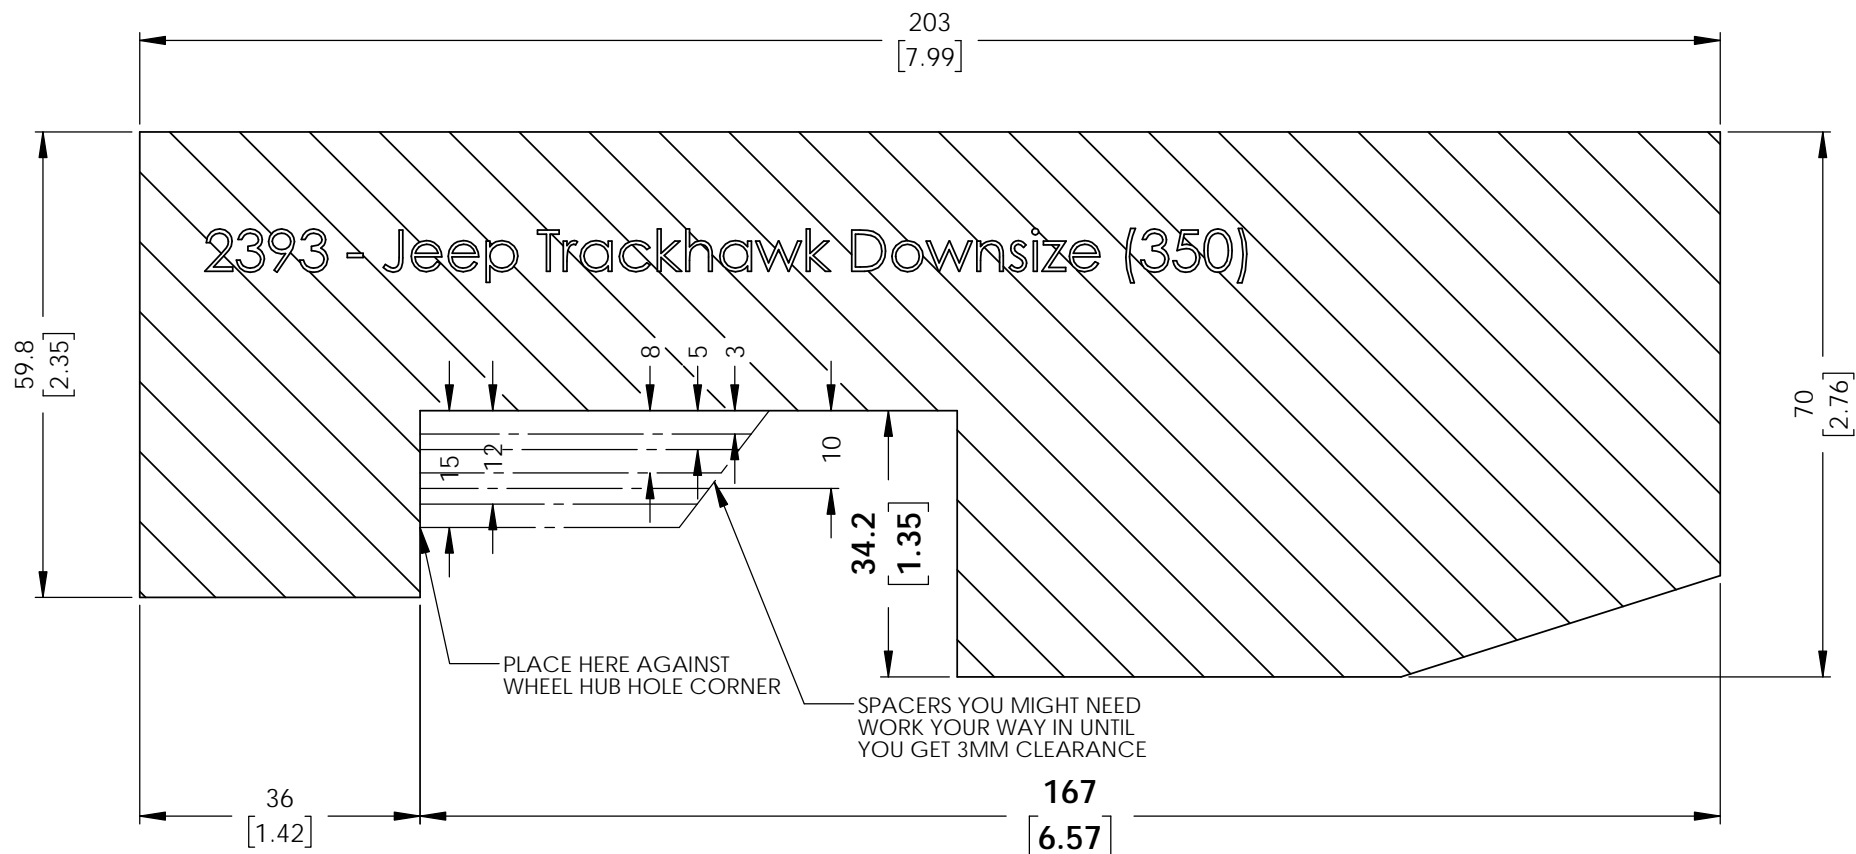

RB PERFORMANCE BRAKES
FULLERTON, CA 92831

TITLE: Jeep Trackhawk Downsize

(350)
DWG#: 2393

Unit	Date Issued
MM [IN]	3/20/21

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TPM PRODUCTS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TPM PRODUCTS, INC. IS STRICTLY PROHIBITED.

INSTRUCTIONS:

1. These dimensions represent actual brake kit so make sure the print out is 1:1 scale.
2. You may have to adjust the printing scale of your printer to 103% for the true dimensions
3. Cut out the template and glue to a rigid carboard.
4. Place the carboard against the corner of wheel hub center hole.
5. A minimum of 3mm clearance is recommended for the wheel barrel and spoke.